


### Standard Kit Contents

This is a fire prevention tool, this is not a fire fighting kit. All forest fire should be handled by fire fighting professionals.

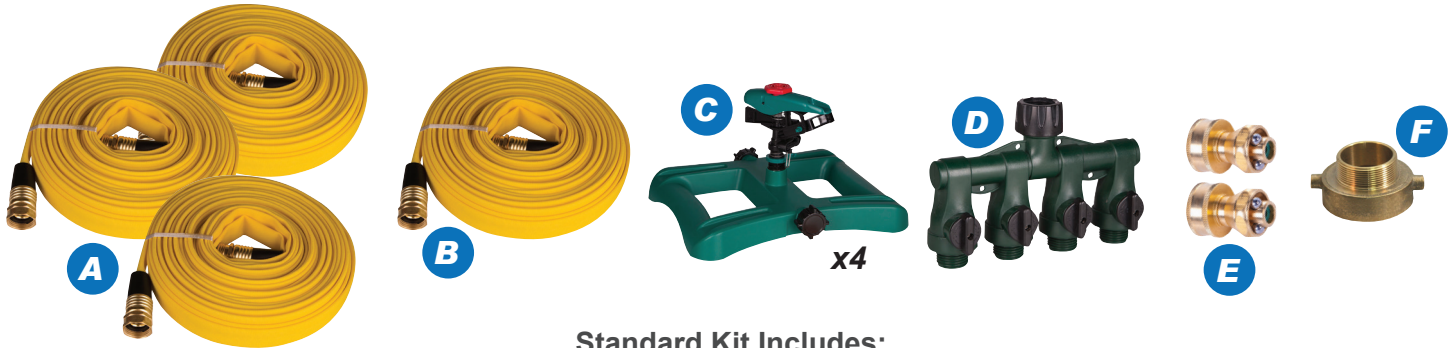

Standard Kit Includes:

Part Number:	Description:	Qty:
<b>A</b> A9709063X25-24	5/8" x 25 FT Yellow Treated Wildland Layflat with GHT	3
<b>B</b> A9709063X50-24	5/8" x 50 FT Yellow Treated Wildland Layflat with GHT	1
<b>C</b> N598	Poly Impulse Sprinkler Sled	4
<b>D</b> N571F-4PP	Full-Flow Green Poly GHT Manifold 4-Valves	1
<b>E</b> N548-075	Brass GHT Sweeper Nozzle with Shut-Off	2
<b>F</b> N9604-MGH-150BR	3/4" MGHT x 1-1/2" Female NPSH Brass Solid	1

### Pressure Chart

Working Pressure:	Number of Sprinklers:
Less Than 35 PSI	1 Sprinkler
35 - 75 PSI	2 Sprinklers
75 - 100 PSI	3 Sprinklers
100 - 125 PSI	4 Sprinklers
125+ PSI	Do Not Run

### Trouble Shooting


Not getting water from the sprinklers:

- 1** Check to make sure water is turned on
- 2** For low flow, make sure the number of sprinklers do not exceed the pressure chart
- 3** Make sure hoses are not kinked
- 4** Make sure screens on sprinklers are not plugged

### 100 PSI Off 1-1/2" Pump


**PUMP**

*\*Please Note: Pump is Not Included*

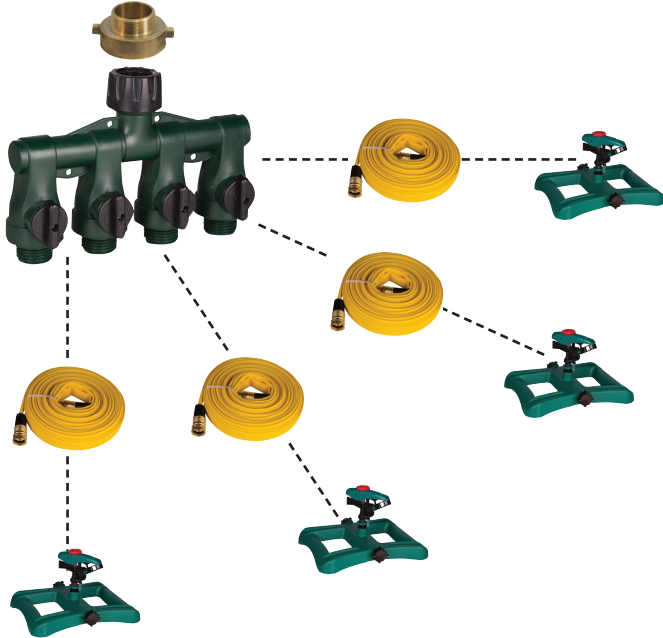


### 35 - 75 PSI w/ One Residential Hook-Up

**RES. HOOK UP**

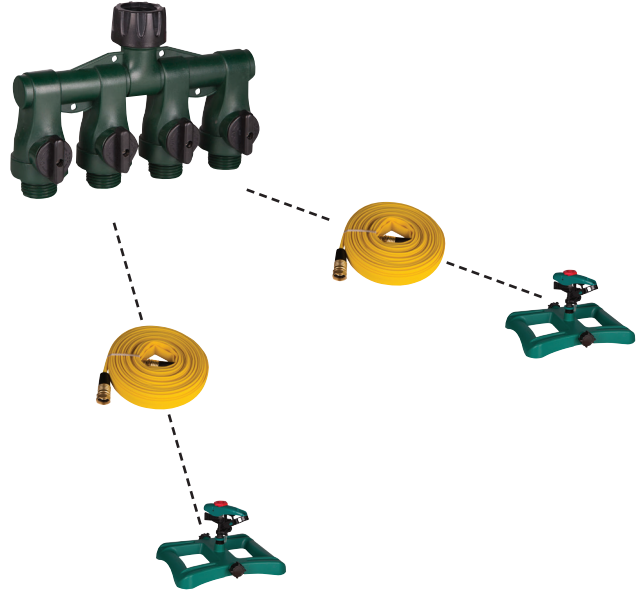

### 35 - 75 PSI w/ Two Residential Hook-Up

**RES. HOOK UP**

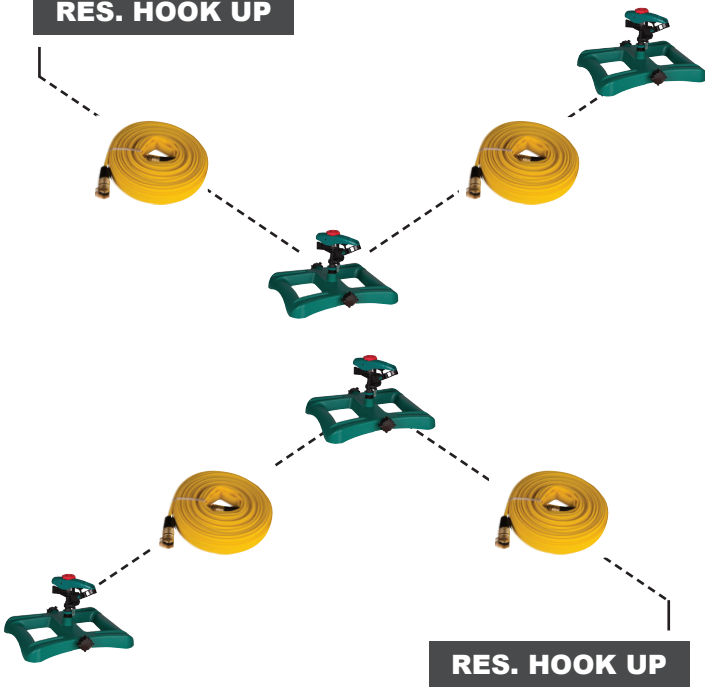

### 75 - 100 PSI w/ One Residential Hook-Up

**RES. HOOK UP**

